



## HAND-HELD SPRAY NOZZLE

MODEL SNZ-01

For checking the protection against ingress of water to prove the degrees of protection with the second characteristic numerals 3 "Protected against Spraying Water" and 4 "Protected against Splashing Water" **...IPX3 and IPX4**. Built in exact accordance with IEC 60529.

in accordance with IEC 60034-5 / 1991-01 § 9.1 Table IV Fig. 5, IEC 60529 / 1989-11 § 14.1 Table VIII Fig. 5, IEC 60947-1 / 1999-02 § C.14.1, EN 60335-1 / 1994 + A 11 / 1995 § 15.1.1, EN 60950 / 1992 + modifications up to 1997 An. T, DIN 40 050 Part 9 / 1993-05 § 7.4 Table 8 Fig. 5, VDE 0630 Part 1 / 1993-05 § 14.3.3 and § 14.3.4, VDE 0632 Part 1 / 1996-04 § 15.2.2

### Standard Outfit:

**1 nozzle head**, outside diameter 102 mm, radius 75.5 mm, with 121 holes of diameter 0.5 mm, in two parts, dismountable for cleaning and delimiting,

**1 moving shield with counterweight**, removable, to screen all jets which deviate more than 60° from the vertical, independent of the nozzle direction,

**1 handle**, internal diameter approx. 15 mm, handle sleeve of special cushioned water-resistant vinyl foam,

**1 flow meter**, measuring range 9 - 10- 11 l/min,

**1 cock**, as a flow control and stop valve, with hose connection,

**1 hose**, (not pictured) nominal width 19 mm (3/4"), 3 m long, with 2 hose clamps.



**Design:** nozzle head and some

small parts of nickel-plated brass, all other metallic parts of stainless steel...

**Model No.: SNZ-01**

**ED & D, Inc.**

901 Sheldon Dr. • RTP (Cary), NC • 27513 USA •


Toll Free Phone: 800-806-6236 • International: +001-919-469-9434 • Fax: (919) 469-5743 •

email: [info@productsafet.com](mailto:info@productsafet.com) • Home page: [www.ProductSafeT.com](http://www.ProductSafeT.com)

## PRODUCT SAFETY SOLUTIONS™

**REFERENCE STANDARDS:** This product complies with IEC60529:2001, EN60529:w/A1:2000 and all IEC, EN and other standards with these specifications (all dimensions in mm):

*Our Nozzle head is made of brass as specified by the standards - - it is then chrome plated*

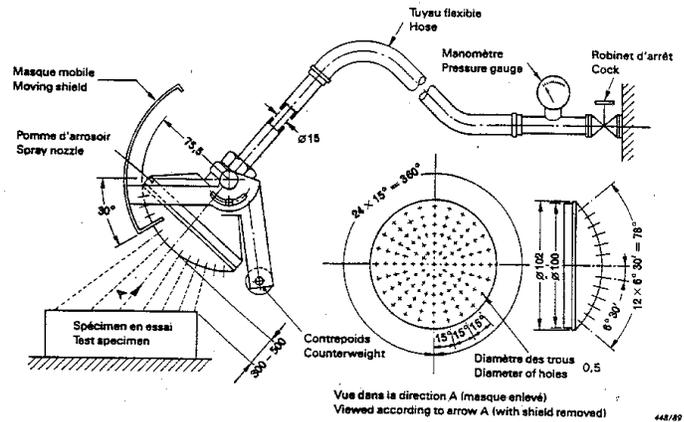

## ISO/IEC 17025

This is a high precision manufactured device. The unit is a stock item. It comes with **ISO/IEC 17025 Accredited** Certificate of Calibration - - in Scope! NIST traceable. Data or uncertainty data available separately.



Also includes:  
 One year warranty  
 Users Manual  
 Free Tech Support

ED&D has been selected as an Inc. 5000 company



© ED&D, Inc. 2011 All rights reserved.

**ED & D, Inc.**

901 Sheldon Dr. • RTP (Cary), NC • 27513 USA •

Toll Free Phone: 800-806-6236 • International: +001-919-469-9434 • Fax: (919) 469-5743 •

email: [info@productsafet.com](mailto:info@productsafet.com) • Home page: [www.ProductSafeT.com](http://www.ProductSafeT.com)